



HANDLING MANUAL
HPS40-1 3+2 with CPA



HIRSCHMANN
AUTOMOTIVE

1 Handling manual - plugging

1.1 Step 1

Collar the connector [1] to the mating side [2] and insert the connector.



TIPP:



Consider the correct orientation.

1.2 Step 2

Insert the connector with force until block.




TIPP:



If the connector is not at the final position, the locking hook stays outside.
A movement of the CPA (black part) is not possible.

1.3 Step 3

Move the CPA (black part) to the front block

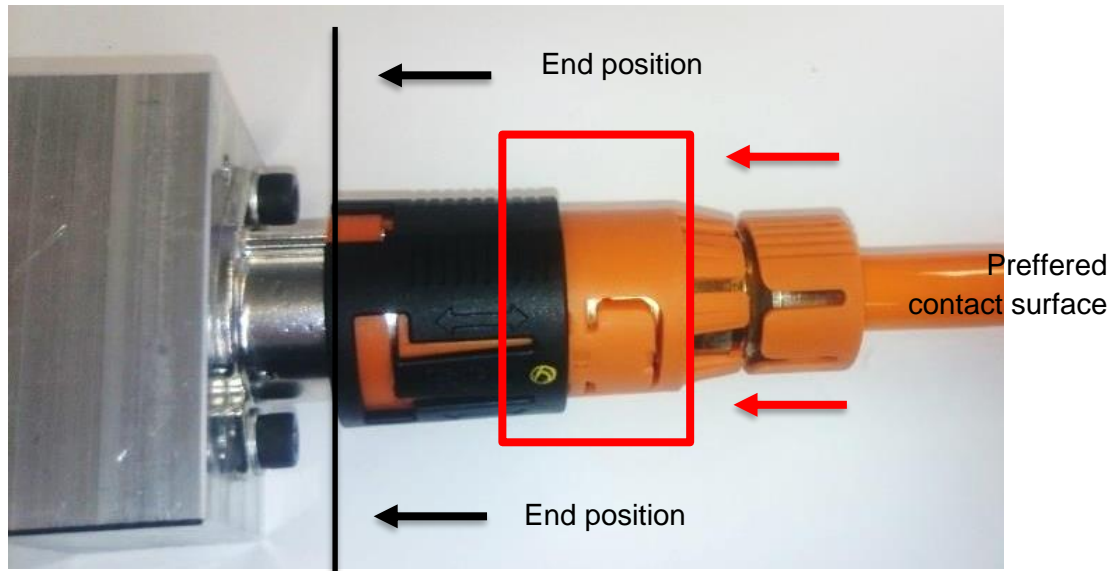

TIPP:




CPA (black part) is at the final position, if the marked part is covered.

2 Handling manual - plugging

2.1 Step 1

Pull the CPA (black part) back tot he blocking position.

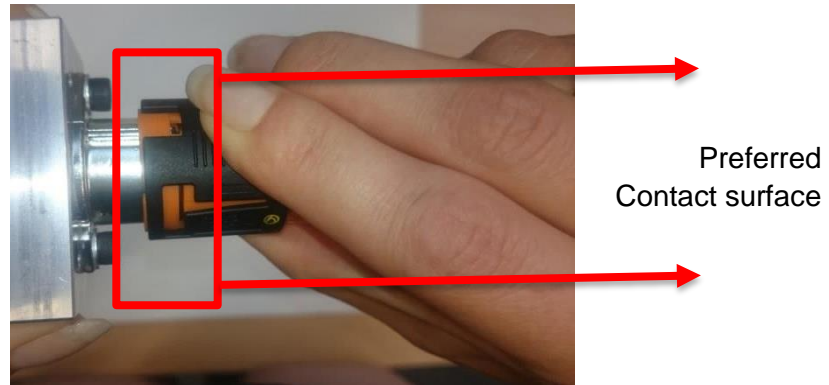


TIPP:



Pulling back by holding at the marked area on both sides simultaneously.

2.2 Step 2

First pressing both locking hooks together and then pull the connector.

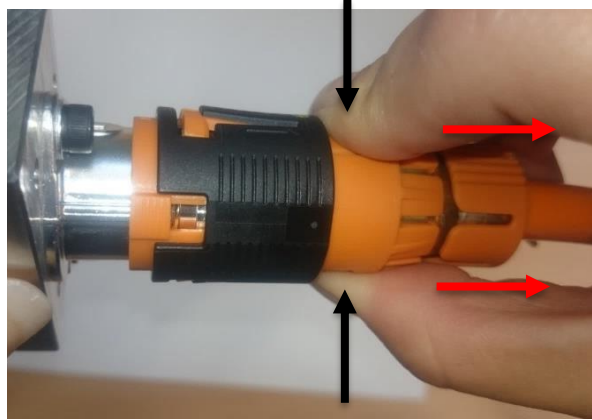

TIPP:



Pressing area of locking hook on both sides.
If it is easier, it is allowed to support by pulling at the cable.